#### **Product sheet**

Pole

# **Output connector**



Product Contacts: 12, Cable plug connector, (the pin and socket insert counter-rotate in

right and left turning models)


12


Article number

Area

M23 Power Series 623 99 4605 00 12



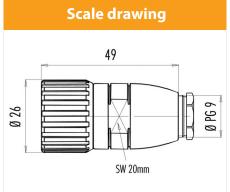

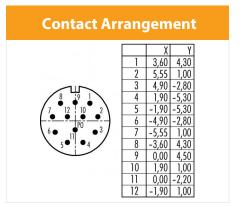

## You can find the assembly instruction on the next page.

# Technical data

#### **Common values**

Connector Design
Connector locking system
Termination
Wire gauge (mm)
Wire gauge (AWG)
Cable outlet
Upper temperature
Lower temperature

Cable plug connector screw Solder 1.00 mm<sup>2</sup> 18 6 - 10 mm 125 °C -20 °C

#### **Electrical values**

Rated voltage 150 V Rated impulse voltage 1500 V Pollution degree 3 Overvoltage category Ш Material group Ш Rated current (40°C) 8 A Volume resistivity  $\leq$  3 m $\Omega$ EMV compliance not shielded Degree of protection IP67 Mechanical operation > 50 mating cycles

#### **Material**

Material of contact Contact plating Material of contact body Material of housing

Au (Gold) PBT/PA66 CuZn (Brass nickel-plated)

CuZn (Brass)

Contacts: 12. Cable plug connector, right-turning

#### **Product sheet**

# **Output connector**




Product Contacts: 12, Cable plug connector, (the pin and socket insert counter-rotate in right and left turning models)

12

Area Article number M23 Power Series 623 99 4605 00 12

Pole 1

## Installation instructions / Mounting cutout

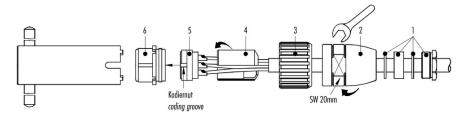

- Kabelverschraubung Pos. 1, Adapter Pos. 2 und Überwurfmutter Pos. 3 auf das Kabel schieben.
- Kabel-Außenmantel 20 mm abisolieren.
- Folie, Füller und innere Isolierungen abschneiden.
- Litzen 3,5 mm abisolieren, verdrillen und verzinnen.
- Litzen an Kontakte löten, crimpen oder schrauben.
- · Distanzhülse Pos. 4 einfügen.
- Einsatz Pos. 5 und Distanzhülse Pos. 4 in Einsatzring Pos. 6 einführen. Hierbei ist zu beachten, daß die gewünschte Kodiernut des Einsatzes Pos. 6 in den Kodiersteg eingeführt wird.
- Adapter Pos. 2 Festschrauben auf Anschlag.
- Kabelverschraubung Pos. 1 Festschrauben.

Anzugsdrehmoment für Klemmschraube Kontakteinsatz Pos. 5 mit Schraubkontakten beachten:

- max. 0,1 Nm für Schraubkontakte Steckdurchmesser 1 mm
- max. 0,2 Nm für Schraubkontakte Steckdurchmesser 2 mm

- Push the cable screw connection (1), adapter (2) and coupling nut (3) onto the cable.
- Strip the cable coating by 20 mm.
- Trim foil, filler and inner insulation.
- Strip the single wires by 3.5 mm, twist and tin.
- Solder, crimp or screw the single wires to the contacts.
- Insert the distance shell (4).
- Guide the insert (5) and distance shell (4) into the insert ring (6), mind that the desired coding groove of the insert (6) is pushed into the coding bar.
- Screw the adapter (2) as tight as possible.
- Screw the cable gland (1) as tight as possible.

Please note: torque for clamping screw for contact insert (5) with screw contacts:

- max. 0.1 Nm for screw contacts with mating dia. 1 mm
- max. 0.2 Nm for screw contacts with mating dia. 2 mm

Date: 2015-06-04 - Page 2 of 2