#### **Product sheet**

### Miniature connector



Product Contacts: 5, Female cable connector with

Illustration

cable clamp, shieldable, cable outlet 4 - 6


mm, with UL approval

Pole


M16 IP67 Series 423 Article number 99 5114 09 05

#### **Scale drawing Contact Arrangement**



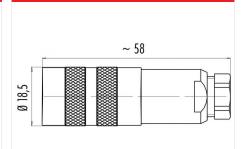


Area



	X	γ
]	-3,03	-1,75
2	-3,03	1,75
3	0,00	3,50
4	3,03	1,75
5	3,03	-1,75

#### **Attenuation characteristic**

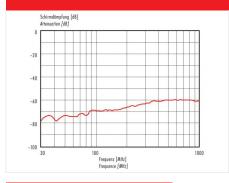

You can find the item description and assembly instruction on the next page.

# **Technical data**

#### **Common values**

Connector Design Connector locking system Termination Wire gauge (mm) Wire gauge (AWG) Cable outlet Upper temperature Lower temperature

Female cable connector screw Solder 0.75 mm<sup>2</sup> 20 4 - 6 mm 95 °C -40 °C

### **Electrical values**

Rated voltage 250 V Rated impulse voltage 1500 V Pollution degree Overvoltage category Material group Ш Rated current (40°C) 6 A Volume resistivity  $\leq$  3 m $\Omega$ EMV compliance shielded Degree of protection Mechanical operation > 500 mating cycles

#### **Material**

Material of contact Contact plating Material of contact body Material of housing

CuSn (Bronze) Au (Gold) PBT (UL 94 V-0) CuZn (Brass nickel-plated)

Contacts: 5, female cable connector with cable clamp, shieldable, cable outlet 4 – 6 mm, gold plated contacts

#### **Product sheet**

### Miniature connector




Product Contacts: 5, Female cable connector with cable clamp, shieldable, cable outlet 4 – 6

mm, with UL approval

Pole

Area Article number M16 IP67 Series 423 99 5114 09 05

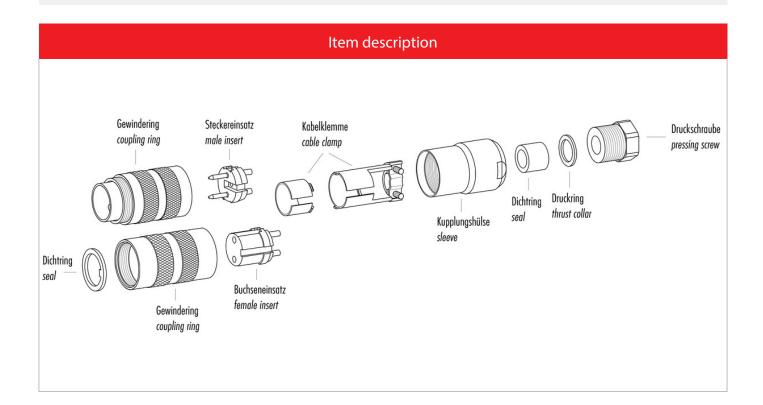

## Installation instructions / Mounting cutout

#### **Gerade Version**

(Ausführung mit Schirmklemmring)

- Druckschraube, Klemmkorb, Dichtung, Distanzhülse und ersten Schirmklemmring auffädeln.
- 2. Litzen abisolieren, Schirm aufweiten und zweiten Schirmklemmring auffädeln.
- Litzen anlöten, Distanzhülse montieren, die beiden Klemmringe mit dem Schirm zusammenschieben und überstehenden Schirm abschneiden.
- 4. Übrige Teile gemäß Darstellung montieren.

### Straight version

(Version with shield clamping ring)

- 1. Bead pressing screw, pinch ring, seal, distance shell and first shield clamping ring on cable.
- 2. Strip wires, widen shield and bead second shield clamping ring.
- Solder wires, snap distance shell, push the two shield clamping rings together and cutt off projecting shielding braid.
- 4. Assemble remaining parts according to picture.

