Product sheet

Miniature connector



Product

Contacts: 7, Female angled connector, shieldable, cable outlet 4–6 mm, with UL

Area Article number M16 IP67 Series 423 99 5126 75 07


Pole

7


Illustration



Scale drawing

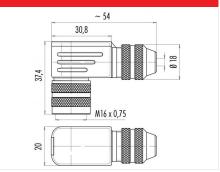


Contact Arrangement



	X	Υ
1	1,75	-3,03
2	3,50	0,00
3	1,75	3,03
4	-1,75	3,03
5	-3,50	0,00
6	-1,75	-3,03
7	0,00	0,00

Attenuation characteristic

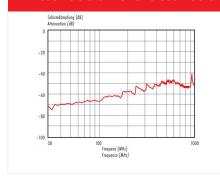

You can find the item description and assembly instruction on the next page.

Technical data

Common values

Connector Design Connector locking system Termination Wire gauge (mm) Wire gauge (AWG) Cable outlet Upper temperature Lower temperature Female angled connector screw Solder 0.75 mm² 20 4 - 6 mm 95 °C

-40 °C

Electrical values

Rated voltage 125 V Rated impulse voltage 800 V Pollution degree Overvoltage category Material group Ш Rated current (40°C) 5 A Volume resistivity $\leq 5~m\Omega$ EMV compliance shielded Degree of protection Mechanical operation > 500 mating cycles

Material

Material of contact Contact plating Material of contact body Material of housing CuSn (Bronze) Ag (Silver) PBT (UL 94 V-0) CuZn (Brass nickel-plated)

Contacts: 7, Female angled connector, shieldable, cable outlet 4 – 6 mm, silver plated contacts, with UL approval



Product sheet

Miniature connector



Product Contacts: 7, Female angled connector,


shieldable, cable outlet 4– 6 mm, with UL

approval

Pole

Area M1 Article number 99

M16 IP67 Series 423 99 5126 75 07

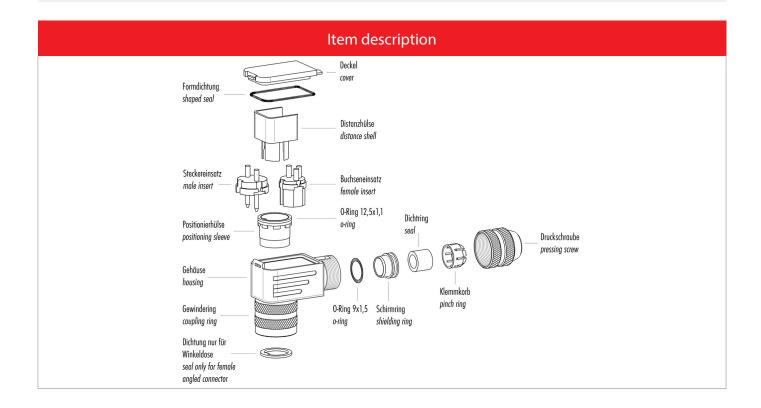

Installation instructions / Mounting cutout Winkelversion 1. Dichtungen montieren (3x). 2. Kabelteile auffädeln. 3. Kabel und Schirm abmanteln. 4. Litzen durch das Gehäuse fädeln. 5. Schirmring, Klemmkorb montieren. 6. Druckschraube leicht andrehen. 7. Litzen an Kontakteinsatz löten. 8. Verdrehhülse in Winkelstellung montieren. 9. Kontakteinsatz, Distanzhülse einsetzen. 10. Deckel einhaken. 11. Druckschraube festziehen (ca. 10-20 Nm). **Angled version** 1. Assemble sealing rings (3x). 2. Bead cable parts. 3. Dismantle cable and shielding braid. 4. Push single wires through housing. 5. Mount shielding ring and pinch ring. 6. Slightly fix pressing screw. 7. Solder wires to insert. 8. Mount positioning sleeve in angled position. 9. Put in insert and distance sleeve. 10. Mount lid. 11. Fix pressing screw (approx. 10-20 Nm).