## **Product sheet**

# Subminiature connector



Product Pole


Contacts: 3, female cable connector


Article number

Area

Micro Push-Pull IP67 Series 420 99 4706 00 03

# Illustration

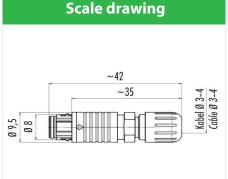

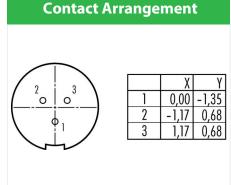

You can find the item description and assembly instruction on the next page.

# Technical data

### **Common values**

Connector Design Connector locking system Termination Wire gauge (mm) Wire gauge (AWG) Cable outlet Upper temperature Lower temperature

Female cable connector Micro Push-Pull Solder 0.14 mm<sup>2</sup> 26 3 - 4 mm 80°C -40 °C

### **Cable data**

material housing Insulation single lead Single lead structure Conductor resistance

# Material of contact Contact plating

# **Electrical values**

Rated voltage 125 V Rated impulse voltage 1500 V Pollution degree 2 Overvoltage category Ш Material group Ш Rated current (40°C) 1 A Volume resistivity  $\leq 8 \, m\Omega$ EMV compliance not shieldable Degree of protection IP67 Mechanical operation > 1000 mating cycles

# **Material**

CuSn (Bronze) Au (Gold) Material of contact body Material of housing

Contacts: 3, female cable connector

## **Product sheet**


# Subminiature connector



Product Pole Contacts: 3, female cable connector

3

Area Article number Micro Push-Pull IP67 Series 420 99 4706 00 03

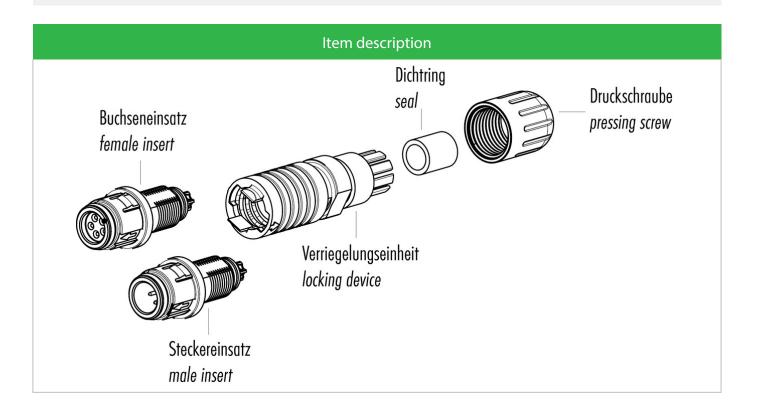

# Installation instructions / Mounting cutout 1. Abmanteln auf L = 9mm. Ummantelung abstreifen. 2. Dichtring in Klemmvorrichtung montieren. Druckschraube und Verriegelungseinheit auf Kabel auffädeln. 3. Litzen abisolieren (I = 3mm) und verzinnen. 4. Einsätze anlöten. Verriegelungseinheit orientiert, Pfeilrichtung beachten, aufschieben und aufschrauben. 6. Druckschraube aufschieben und vor dem Festziehen an Schlüsselfläche kontern. (Bei Demontage zuerst Druckschraube öffnen) 1. Strip to 9mm length and remove cable jacket. Mount sealing ring to clamp device to cable Bead pressing screw and clamp device. Strip the insulation off the wires (I = 3mm) and tin them. Solder wires to solder cups. Align locking unit, bear in mind direction of arrow, push forward and screw tightly. 6. Push pressing screw forward and secure them at flats. (Before unmounting first open pressing screw.)